



Queen City

Lumber and Supply Company


Since 1946

2017 Moulding Catalog


© 2004 Queen City Lumber & Supply Company. May not be reproduced in any form without written permission.

www.queencitylumber.com


2501 Weddington Ave.
Charlotte, NC 28204
704-333-3939

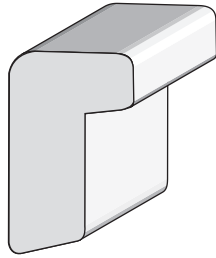


280
Backband
5/8" x 1"

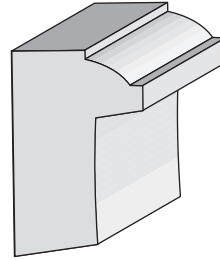


281
Backband
5/8" x 1"

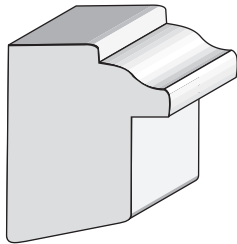

Queen City
Backband w/O.G.
1" x 1-1/4"

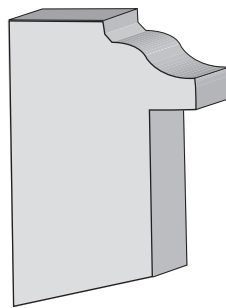

Big Backband w/O.G.
1" x 1-1/2"
1" Throat

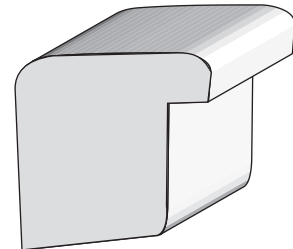

Queen City
Backband
1" x 1"




WM 1195 Stool
11/16" x 2-1/2"




WM 1163 - A 7/8" Cutout Stool
1" x 3-1/4"




WM 1021 Stool
5/8" x 5-1/4"

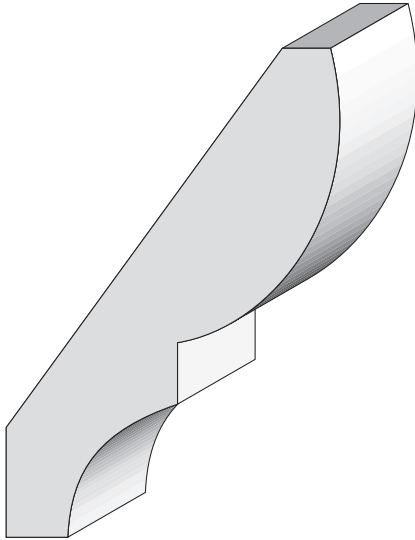


8020 Bed Mould
3/4" x 3-1/4"

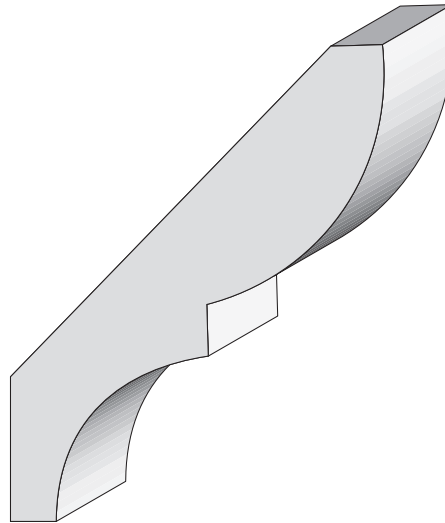


8023 Bed Mould
3/4" x 3-3/4"

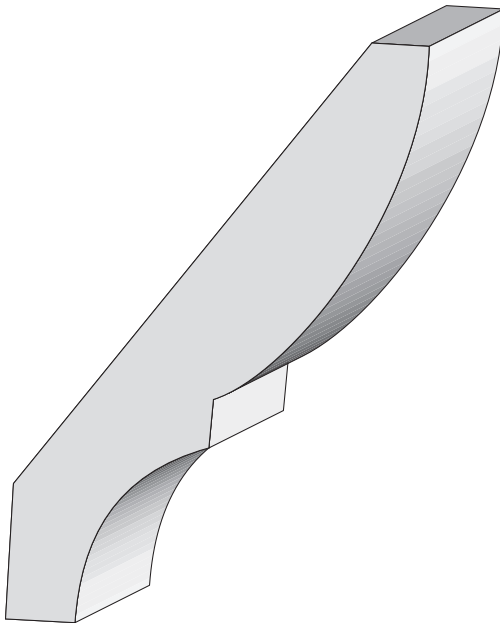


8021 Bed Mould
3/4" x 4-1/4"

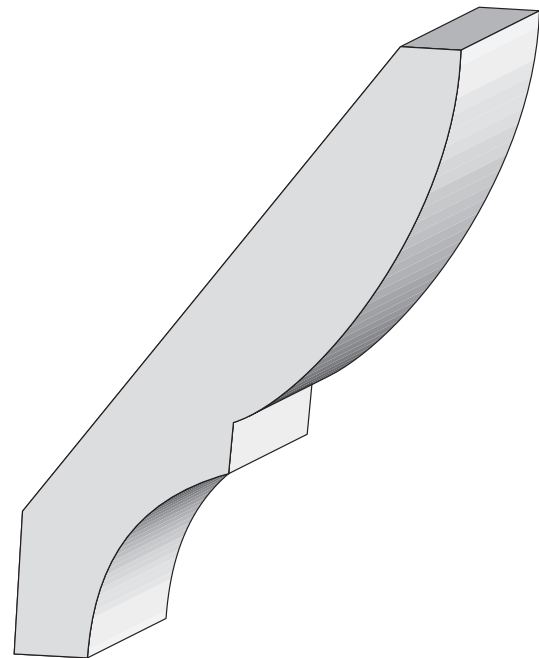


5-1/4 Bed Mould
13/16" x 5-1/4"

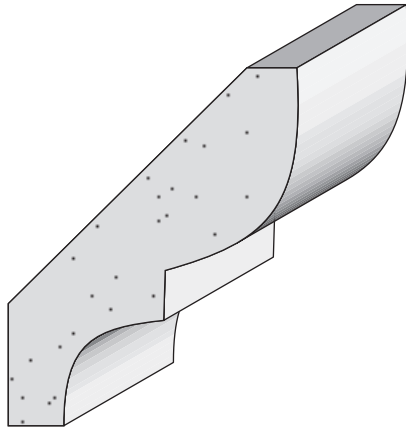


74 Bed Mould
1/2" x 1-3/4"

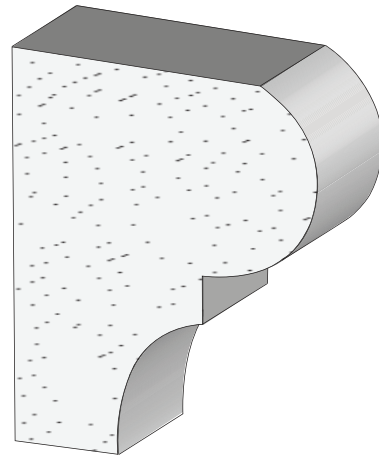


Eastover Solid Bed Mould
1-5/8" x 2"

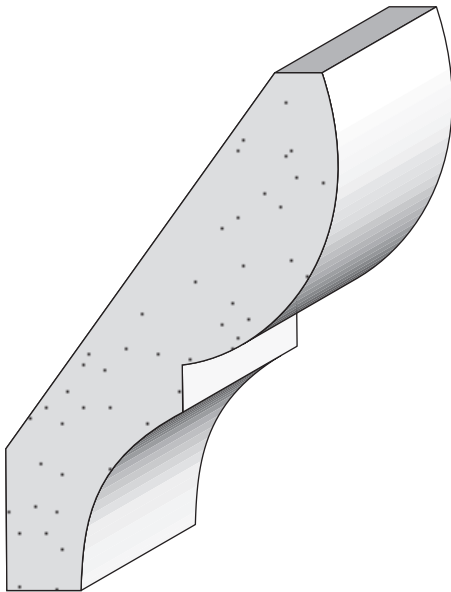


72 Bed Mould
9/16" x 2-1/4"

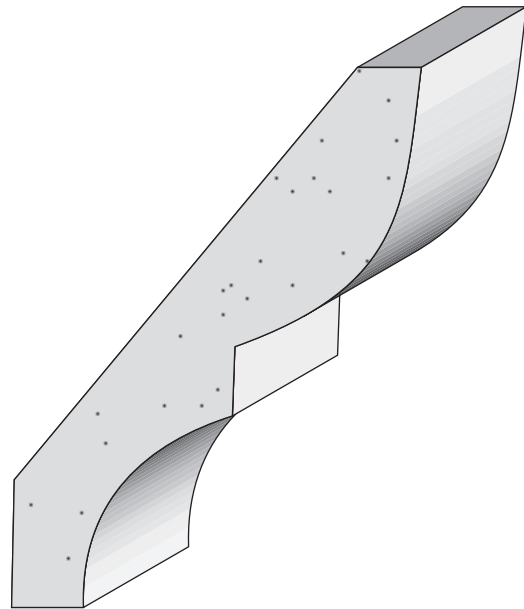


70 Bed Mould
9/16" x 2-3/4"

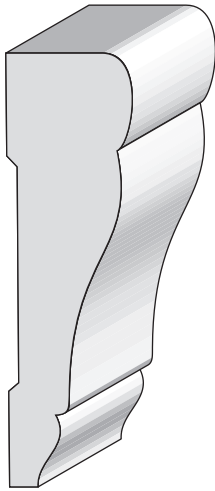


442 Casing
1 1/16" x 2-1/4"

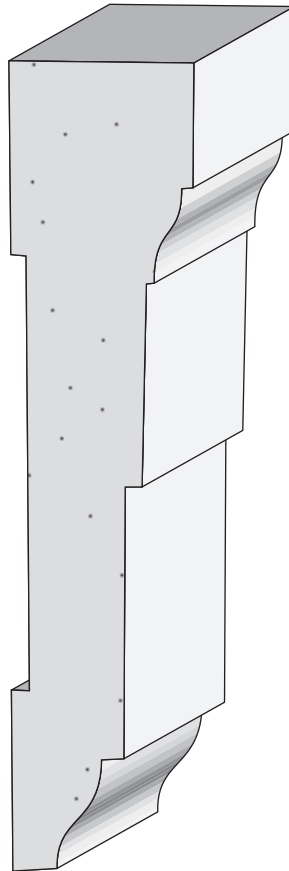


Eastover Casing
3/4" x 3-1/2"

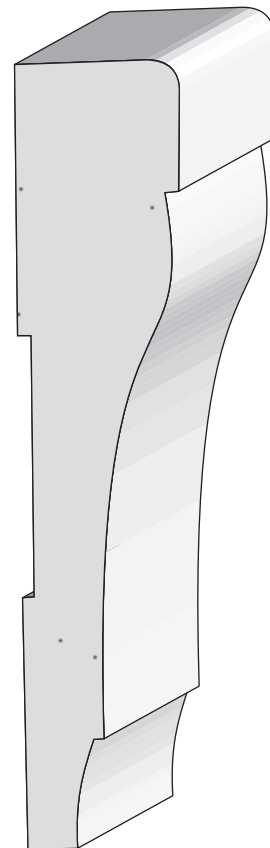


Like 440 Casing
3/4" x 3-9/16"

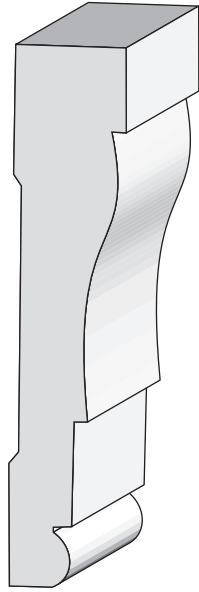


445 Casing
11/16" x 3-1/4"

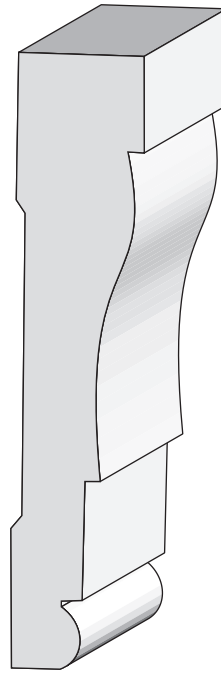


445M Casing
11/16" x 3-1/2"

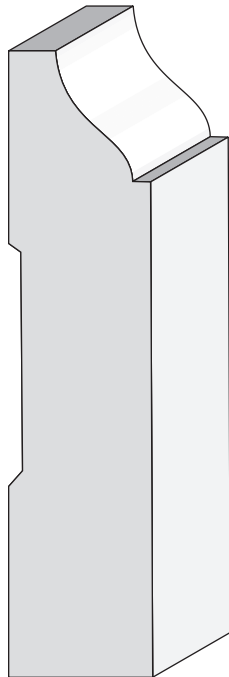


8712 Myers Park Casing
3/4" x 3-1/2"

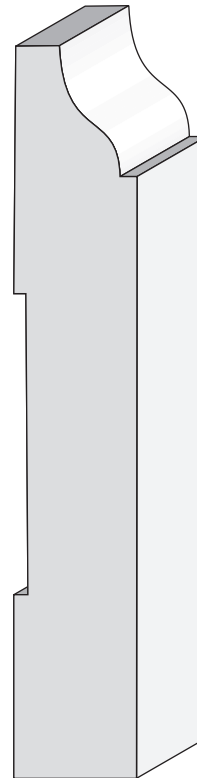


MP5 Myers Park Casing
3/4" x 4-1/2"

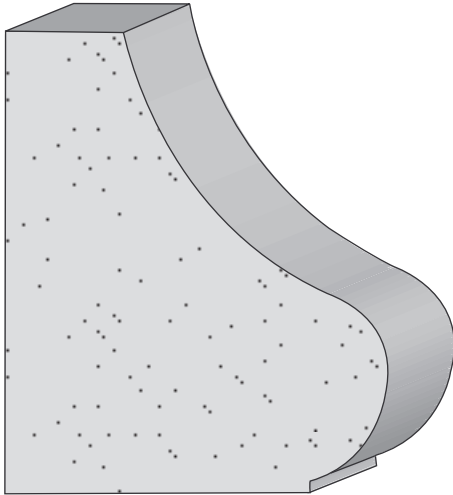


8048 Dilworth
1-3/4" x 2"

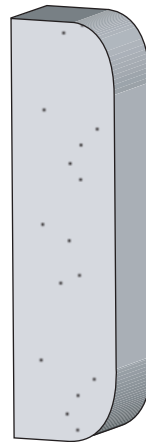


Steel Door Frame Casing
1/2" x 2"

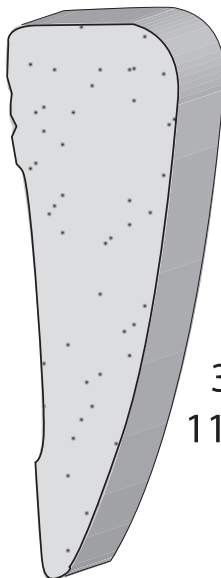


327 Casing
11/16" x 2-1/4"

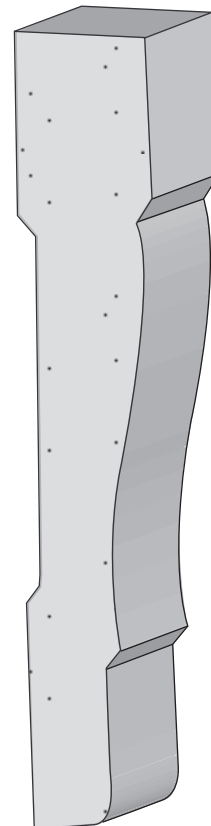


444 A Casing
11/16" x 3-1/2"

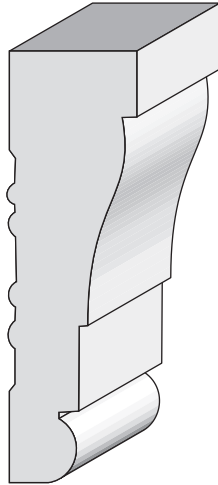


376 Casing
5/8" x 2-1/4"

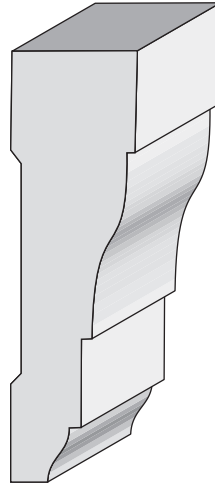


366 Casing
11/16" x 2-1/4"

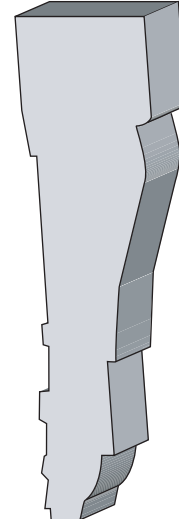


WM 361 Casing
11/16" x 2-1/2"

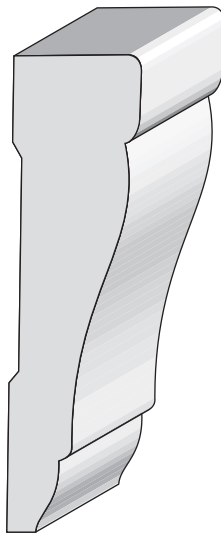


440 Casing
11/16" x 2-1/2"

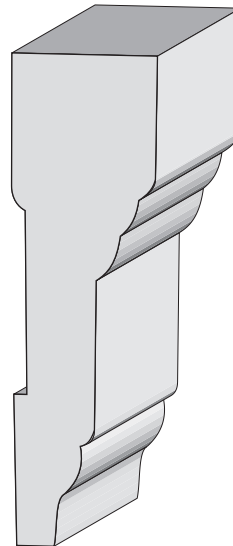


Midwood Casing
3/4" x 2-1/2"

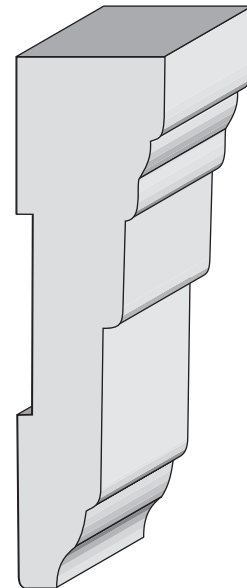


Chantilly Casing
3/4" x 2-5/8"

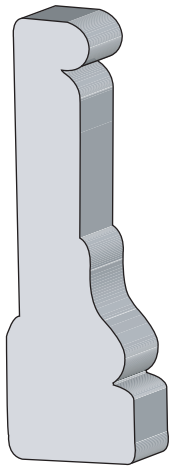


Cotswold Casing
3/4" x 2-1/4"

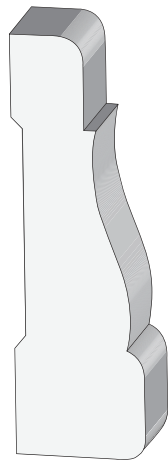


WM356 Casing
1 1/16" x 2-1/4"

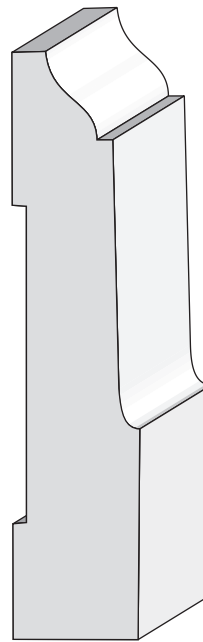


8711 Dilworth Casing
3/4" x 3-1/2"

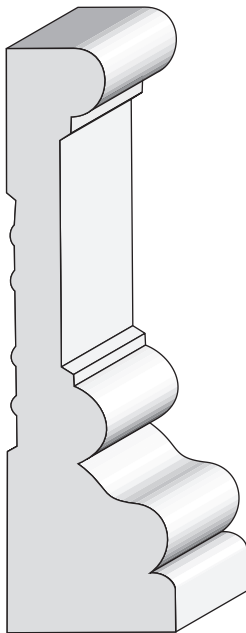


RB3 Casing
1" x 3-1/2"

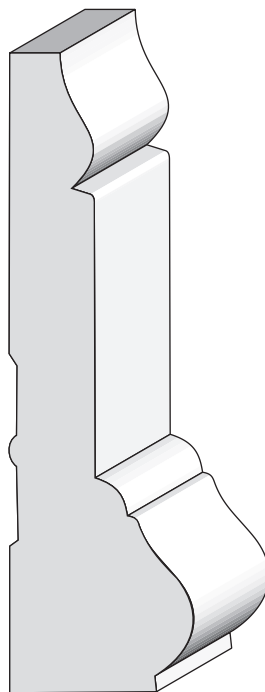


460 Casing
1" x 3-5/8"

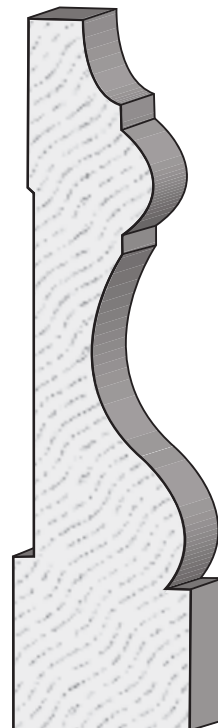


Sharon Casing
1" x 4"

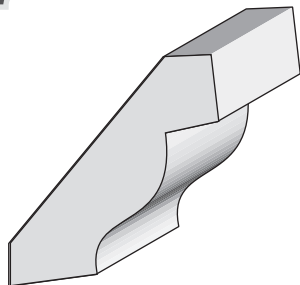


WP 60 Crown
1/2" x 1-3/4"

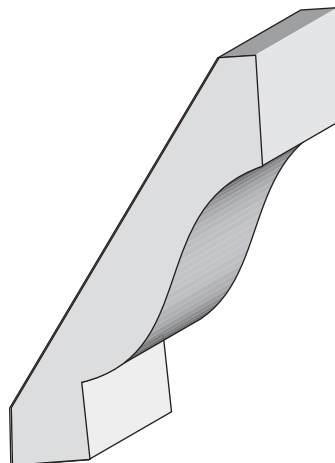


WP 58 Crown
9/16" x 2-3/4"

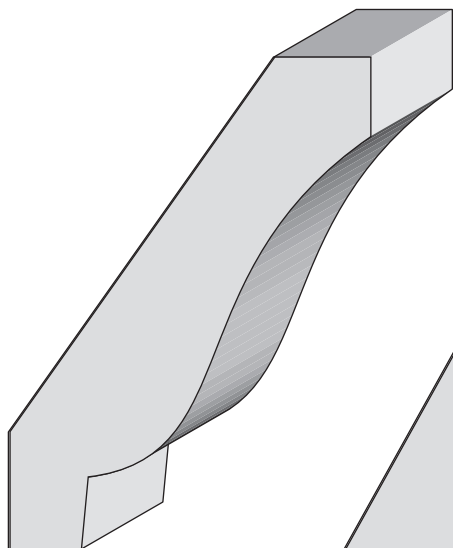

L 57 8002 Crown
11/16" x 3-1/2"

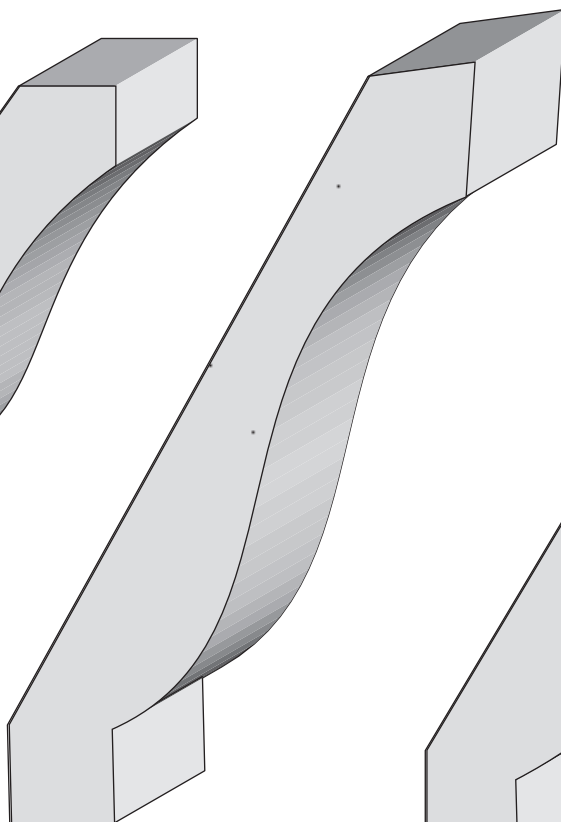


L 56 8005 Crown
3/4" x 4-5/8"

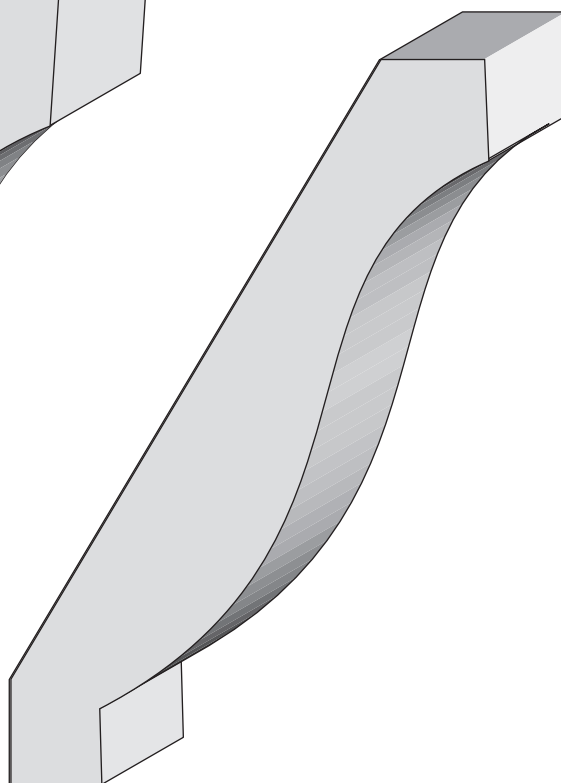


L 55 8004 Crown
7/8" x 5-1/4"


2501 Weddington Ave. Charlotte, NC 28204
Office 704-333-3939 Fax 704-332-3412

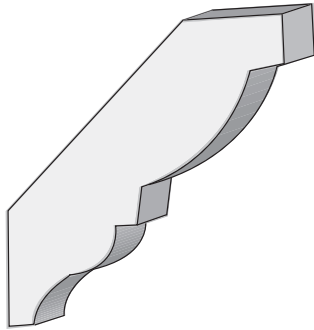


Midwood Crown
5/8" x 2-5/8"

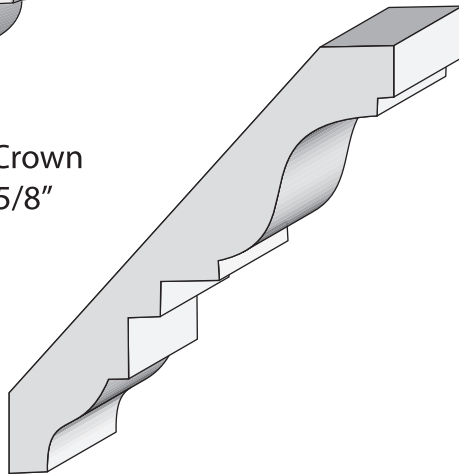


WM 3 Dentil Crown
1/2" x 3-5/8"

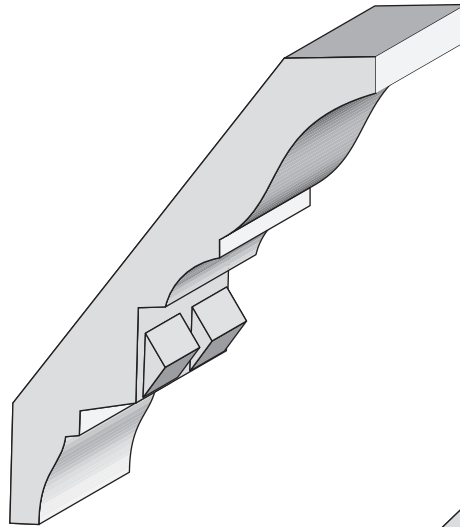


WM 9 Speedy Dentil Crown
11/16" x 4-1/4"

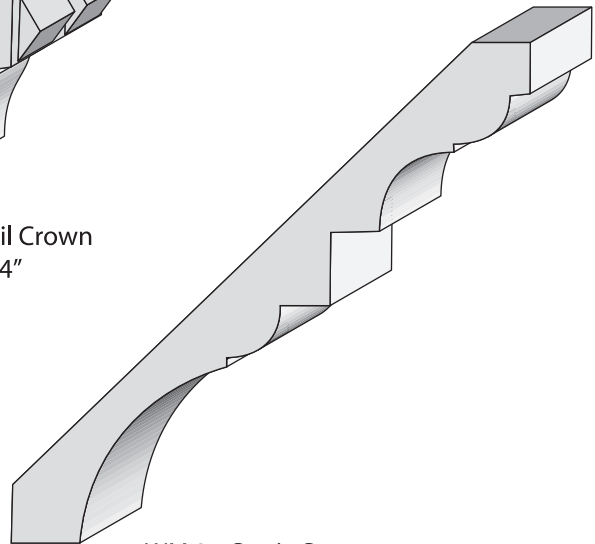


WM 37 Curtis Crown
9/16" x 5"

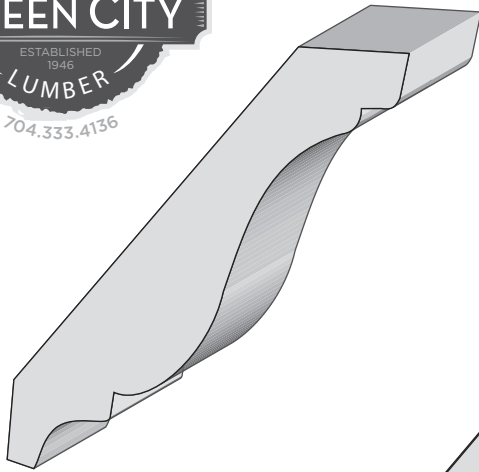


8623 Crown
3/4" x 3-9/16"

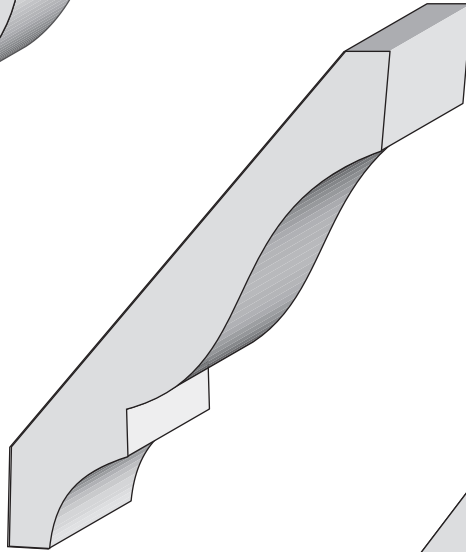


WP 49 Crown
9/16" x 3-5/8"

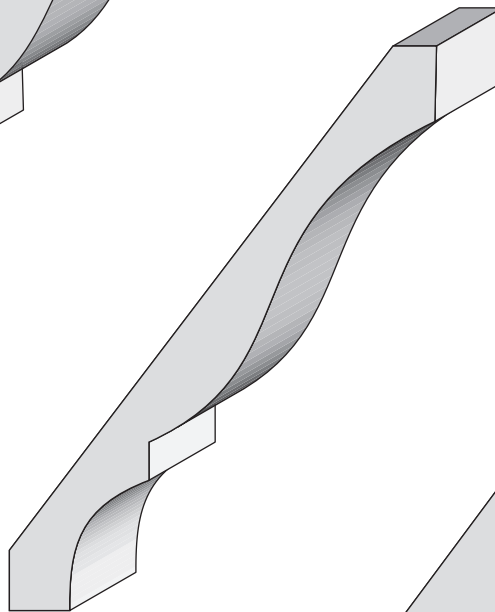


WP 47 Crown
9/16" x 4-5/8"

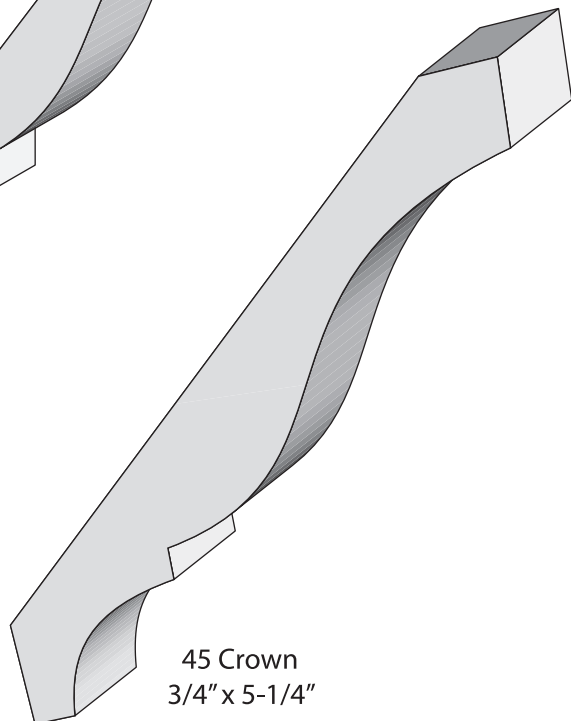


45 Crown
3/4" x 5-1/4"

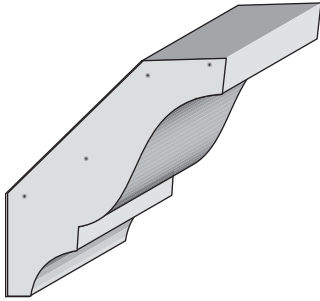


WP 68 Crown
1/2" x 1-3/4"

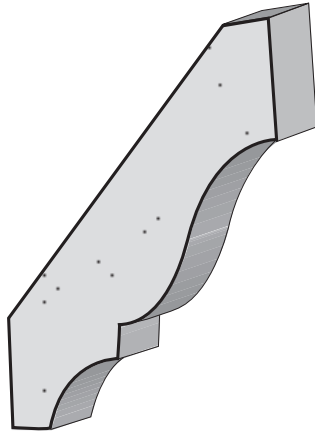


WP 54 Crown
9/16" x 2-1/4"

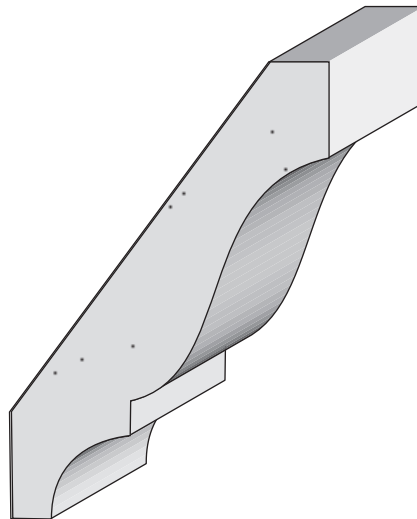


WP 52 Crown
9/16" x 2-3/4"

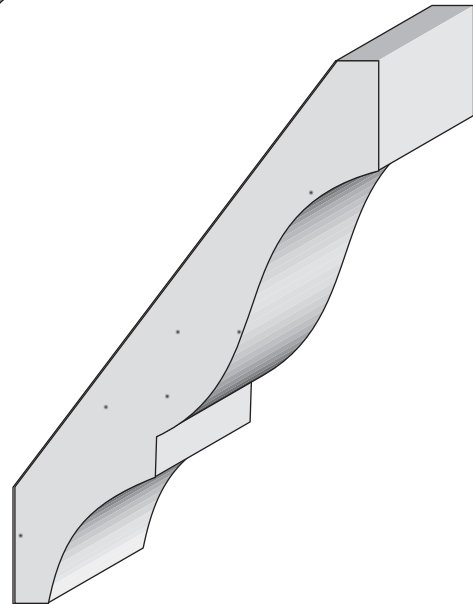


WP 51 Crown
9/16" x 3-1/4"

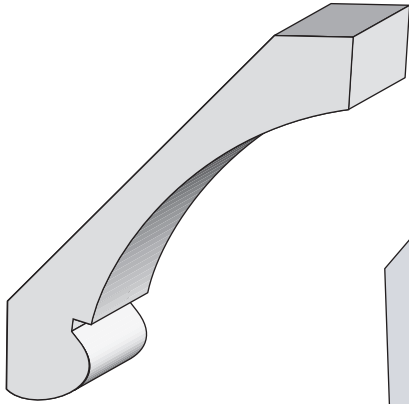


8001 Crown
3/4" x 3-3/4"

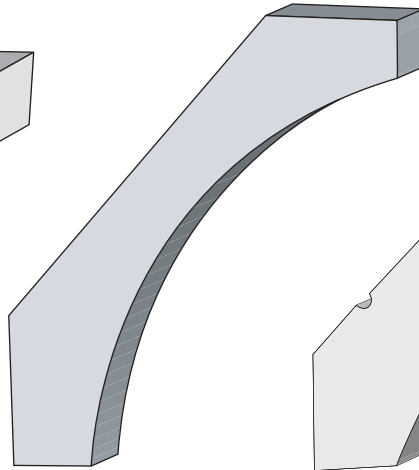


4" Cove
1" x 4-1/8"

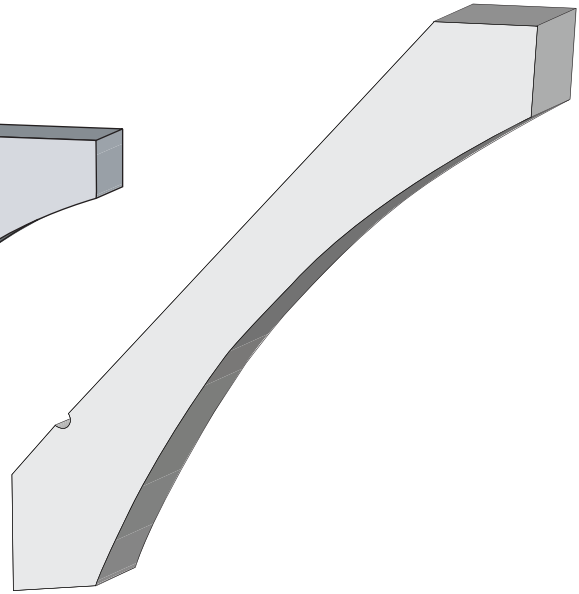


8210 Cove
1-5/16" x 5-1/2"

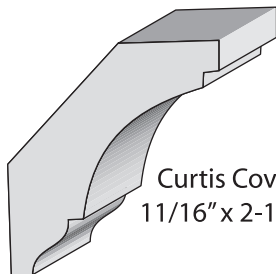


Curtis Cove
11/16" x 2-1/4"

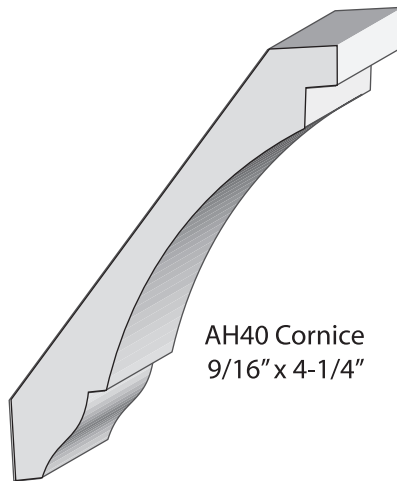


AH40 Cornice
9/16" x 4-1/4"

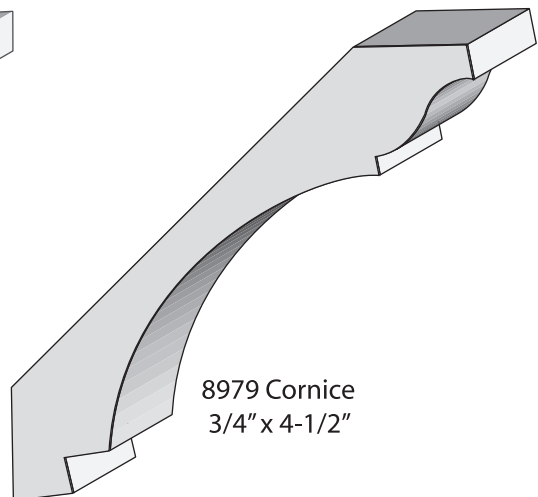


8979 Cornice
3/4" x 4-1/2"

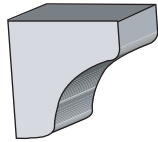


WM 101 Cove
1/2" x 1/2"

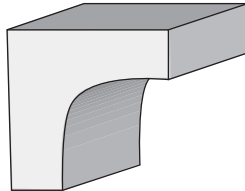


WM 100 3/4" Cove
11/16" x 11/16"

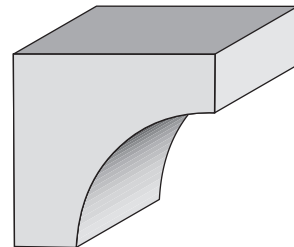

8054 1" Cove
1" x 1"

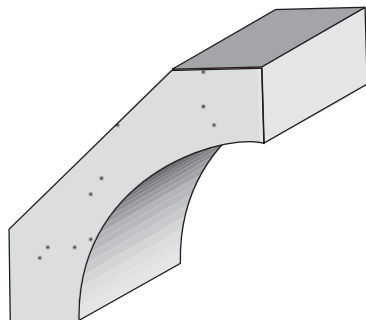


WM 85 Cove
9/16" x 1-3/4"

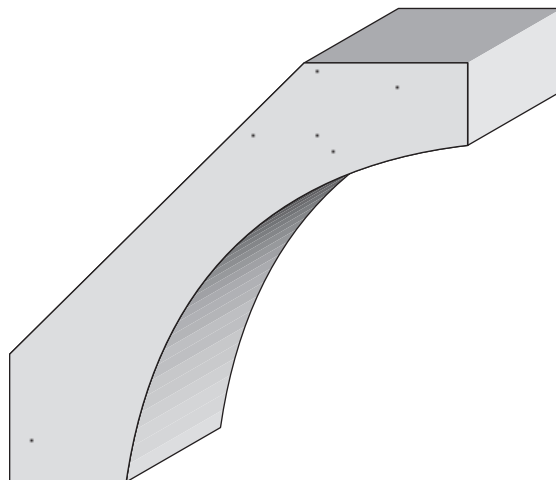


8026 Cove
3/4" x 2-3/4"




M-13
1/4" x 1/2"




M-35
5/8" x 3/8"

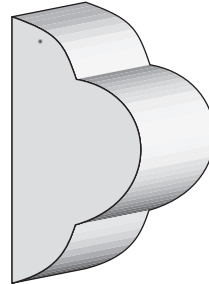


WM 137 Joint Mould
1/2" x 1-1/4"

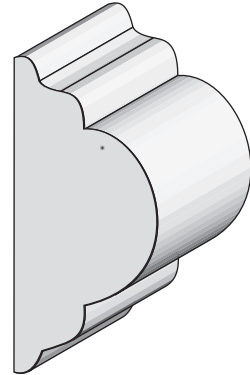


Queen City Panel Mould
5/8" x 1-1/2"

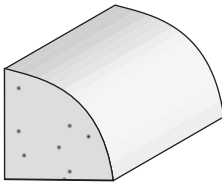


WM 108 1/2" Quarter Round

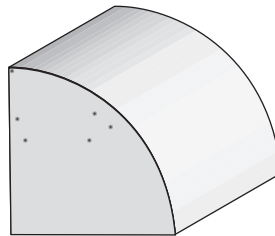


WM 106 3/4" Quarter Round
11/16" x 11/16"

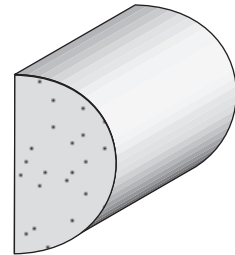


WM 122 Half Round
3/8" x 11/16"

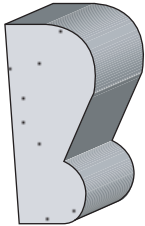


Beauty Mould
5/16" x 11/16"

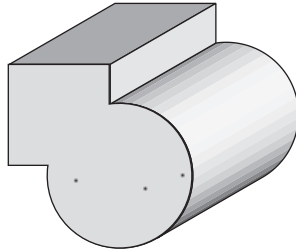


8056 3/4 Corner Bead
3/4" x 3/4"

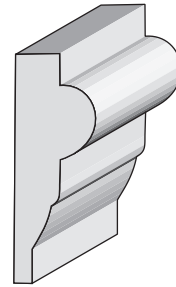

Johnny Moore Mould
3/8" x 1-1/8"

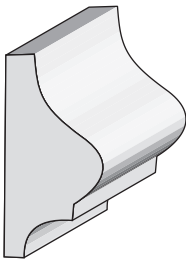


WM 183 Panel Mould
9/16" x 1-1/16"

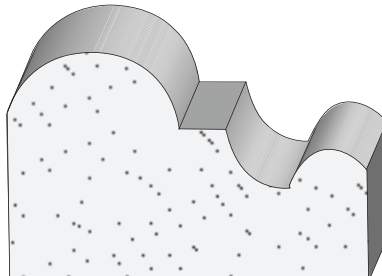


42 Panel Mould
1-1/16" x 1-5/8"




Chair Rail Backer
1/2" x 5-1/4"

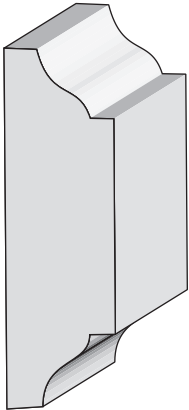


WM 244 Chair Rail
5/8" x 2-1/4"

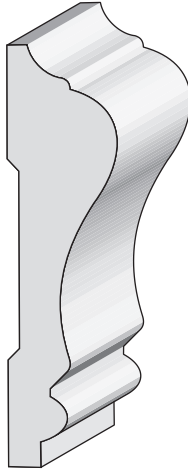


WM 390 Chair Rail
11/16" x 2-5/8"

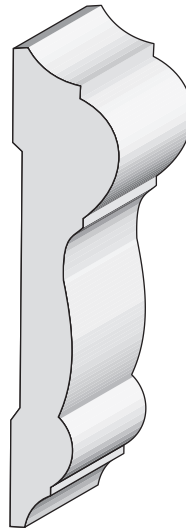


WM 297 Chair Rail
11/16" x 3"

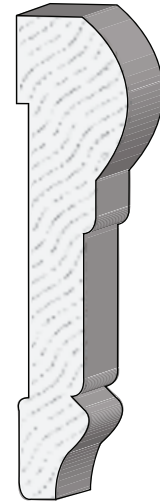


Cotswold Chair Rail
11/16" x 3"

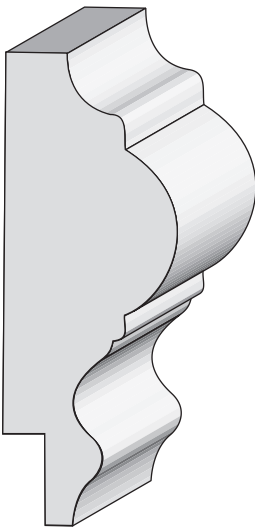


EC5 Rabbetted Chair Rail
15/16" x 2-5/8"

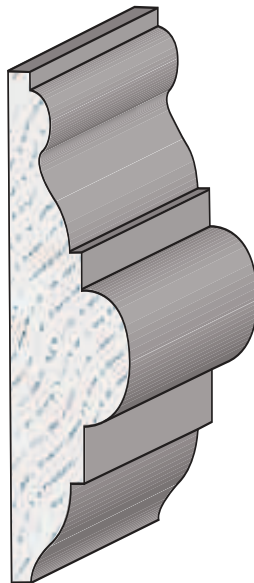


#300 Chair Rail
1" x 3"

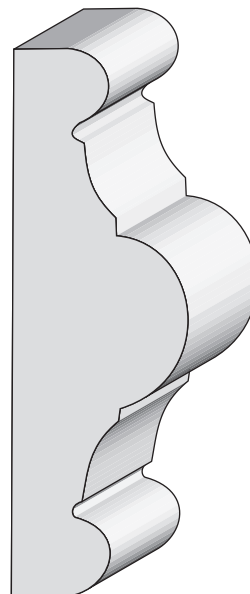


Hatley Chair Rail
1-1/8" x 3-1/2"

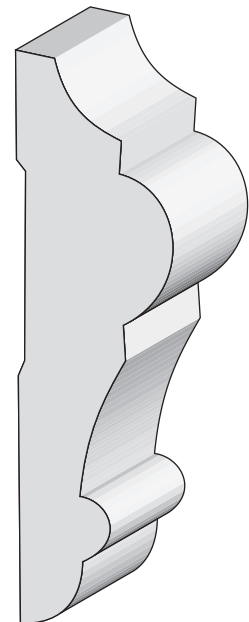

EC7 Chair Rail
1" x 3-1/2"

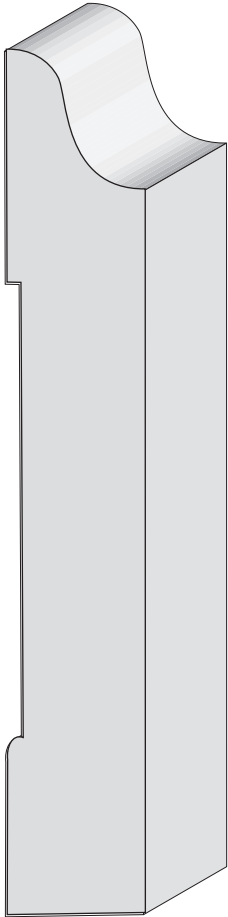


8384 Old Style Base
3/4" x 4-1/2"

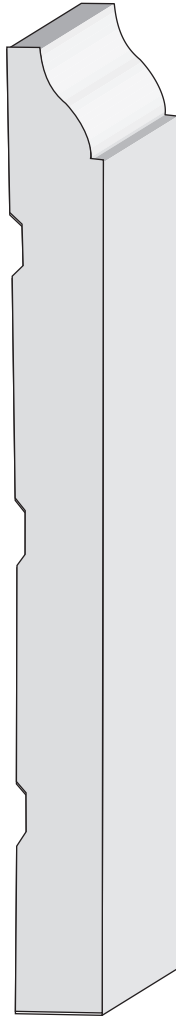


WM 623 Base
9/16" x 3-1/4"

WM 620 Base
9/16" x 4-1/4"

WM 618 Base
9/16" x 5-1/4"

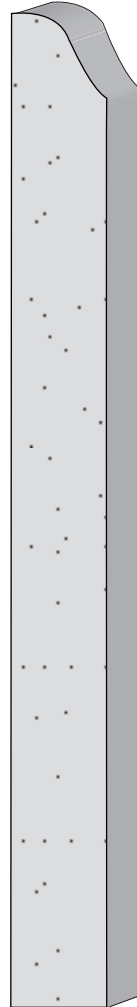

Old Style Base
1/2" x 5-1/4"

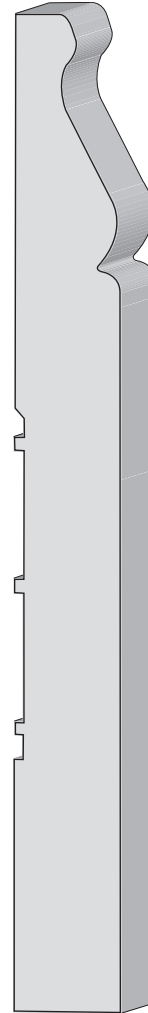


MDF Speedbase
9/16" x 5-1/4"


MDF Speedbase
9/16" x 7-1/4"




Treated Exterior Trims

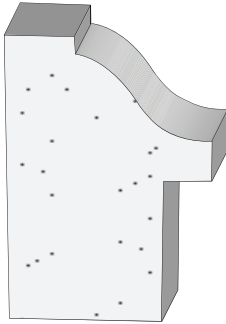


Piperglen Treated Backband
1-3/8" x 1-7/8"

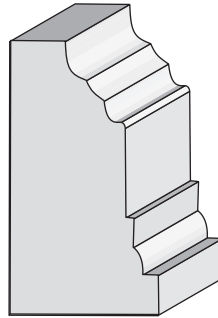


Titan Brick Mould
1" x 1-13/16"

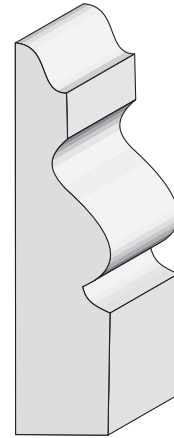


WM 212
Shingle Mould
11/16" x 2-1/2"
Primed Treated or PVC

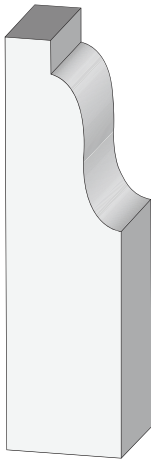


WM 207
Shingle Mould
11/16" x 2-1/2"
Primed Treated

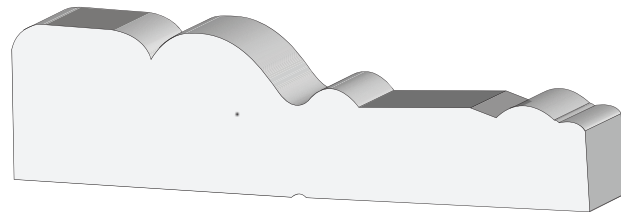

Congressional Brick Mould
1-3/16" x 4-1/2"

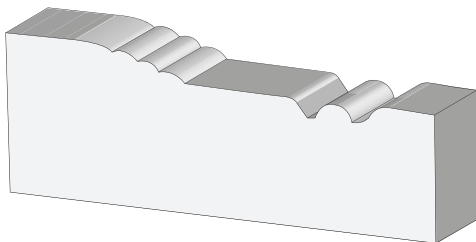


Presidential Brick Mould
1-1/4" x 3-1/2"

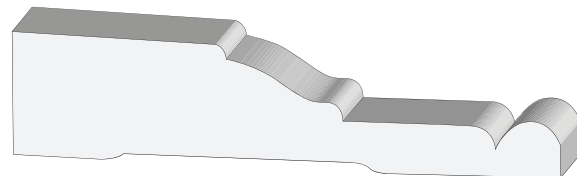


Piperglen Brick Mould
1" x 4-1/2"


Treated Exterior Trims

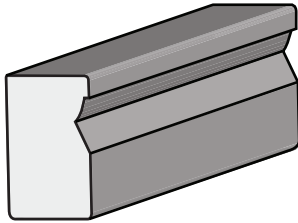


Kolbe Brick Mould
1" x 2"

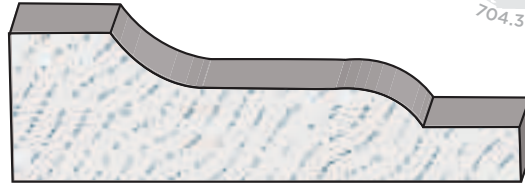


TR Rake Mould
1" x 3 1/4"

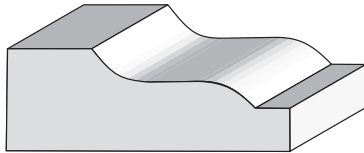


WM 210
Shingle Mould
9/16" x 1-5/8"
Primed Treated or PVC

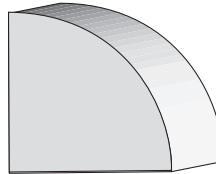


8068 1" Quarter Round

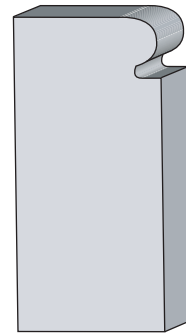


Beaded Brick Mould
1" x 2"

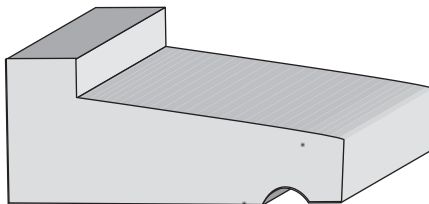


WM 197 Drip Cap
1 1/16" x 1-5/8"
Primed Treated or PVC

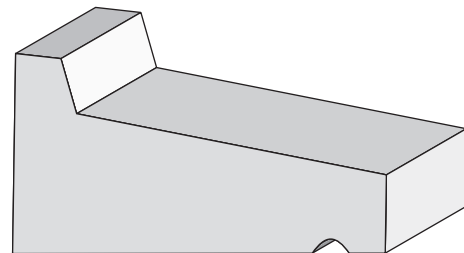


WM 187 Drip Cap
1-1/16" x 2"
Primed Treated

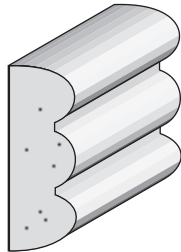


WM 144
Beaded Screen Mould
1/4" x 3/4"

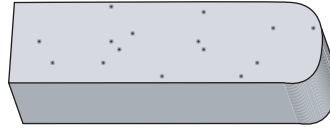


Neck Mould
5/16" x 1-1/4"

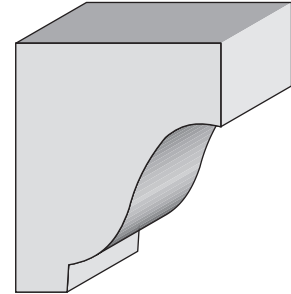


Overdoor
1-1/4" x 1-1/2"

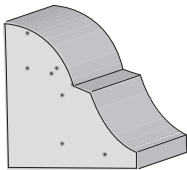


B&C Sticking
1/2" x 1/2"

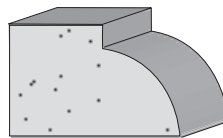


Ovalo Sticking
5/8" x 3/8"

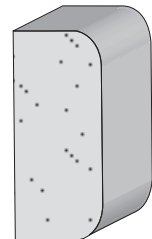


WM 142
Screen Bead
1/4" x 3/4"

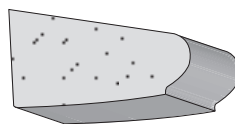


Lodging
1-1/16" x 3/8"

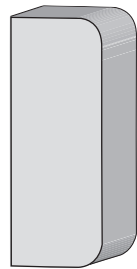


E2E Stops
1/2" x 1-5/16"

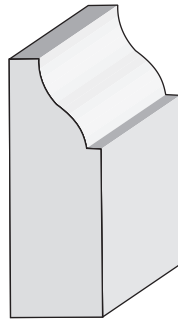


New Style Stop
1/2" x 1-3/8"

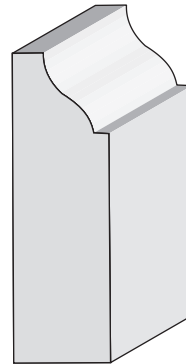


New Style Stop
1/2" x 1-5/8"

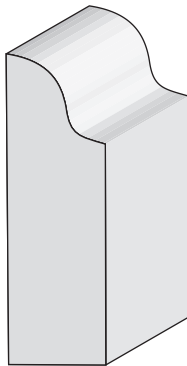


Old Style Stop
1/2" x 1-5/8"

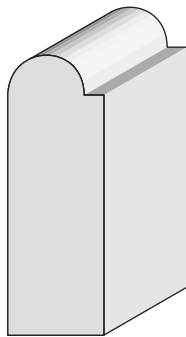


8120 Beaded Stop
1/2" x 1-1/2"

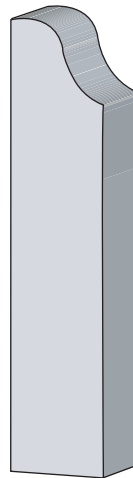


Garage Door Stop
1/2" x 2-1/4"

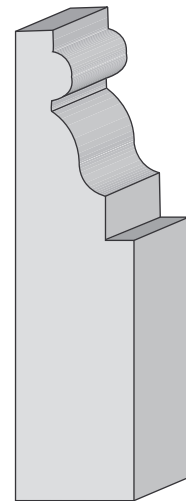


WM 12 Apron
5/8" x 2-1/2"

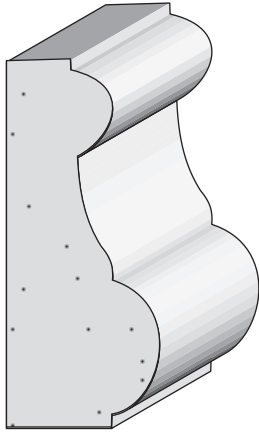


Midwood Base Mould
5/8" x 1-9/16"

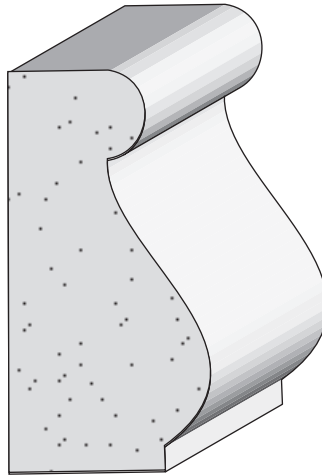


8902 Dilworth Base Mould
3/4" x 1-1/2"

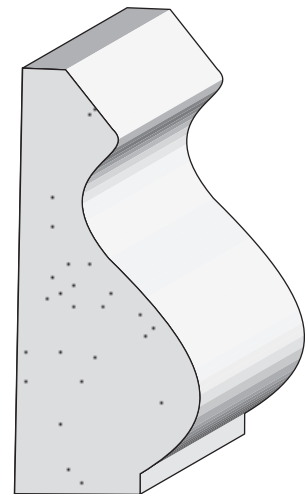


8456 Base Mould
3/4" x 1-3/4"

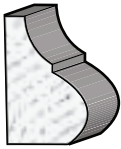


Itty Bitty Base Mould
7/16" x 3/4"

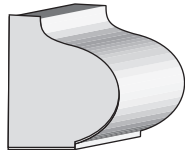


WM 172 Base Mould
9/16" x 3/4"

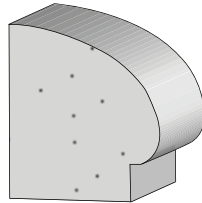


Oakhurst Base Mould
3/4" x 13/16"

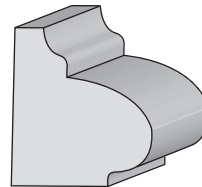


8620 Latta Base Mould
3/4" x 7/8"

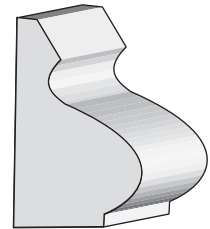


WM 164 Base Mould
5/8" x 1-1/8"

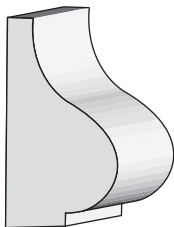

WM 166 Base Mould
5/8" x 1-1/4"

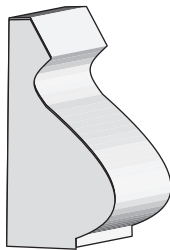


WM 163 Base Mould
5/8" x 1-3/8"

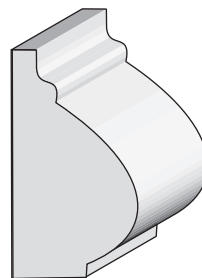


8621 Chantilly Base Mould
3/4" x 1-3/8"




SMC-430 Base Mould
3/4" x 1-1/2"

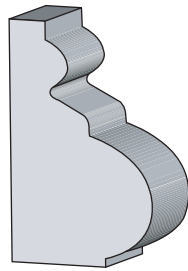


Butch's Base Mould
3/4" x 1-1/8"

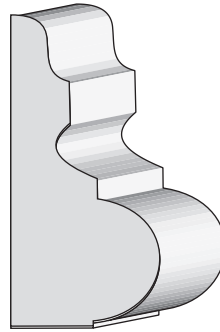


8174 Base Mould
3/4" x 1-5/8"

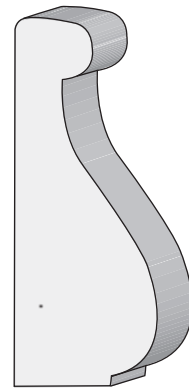


Elizabeth Base
3/4" x 1-15/16"

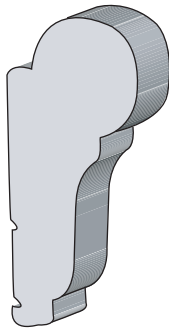


7263 Latta Picture Mould
1-1/16" x 1-5/8"

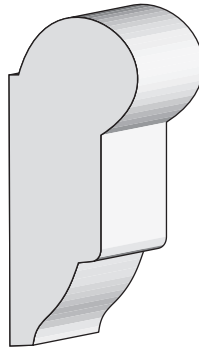


WM 273 Picture Mould
5/8" x 1-3/4"

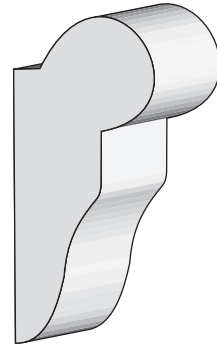


WM 276 Picture Mould
3/4" x 1-3/4"

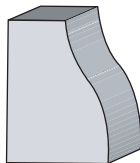


Old Shoe /Base
5/8" x 3/4"

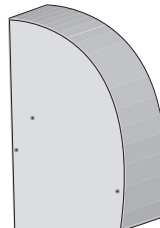


Big Shoe
1/2" x 1"

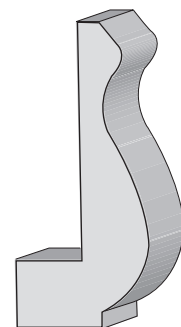


Cabinet Door Mould
1-1/16" x 1-5/8"

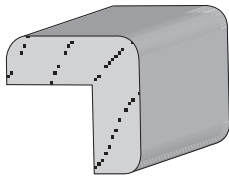


EC206 Corner
3/4" x 3/4"

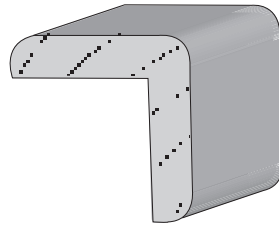


EC205 Corner
1-1/16" x 1-1/16"

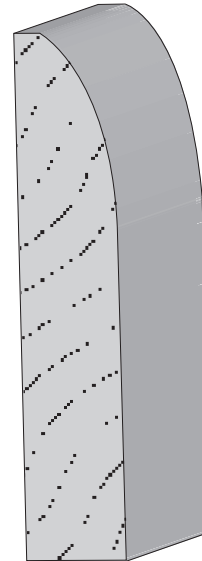


WM 713 Base Mould
9/16" x 3-1/4"

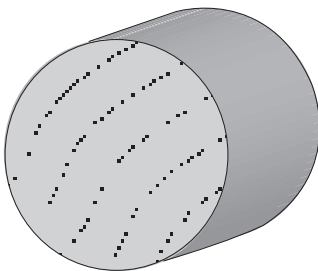

EC233 Full Round
1-1/4" x 1-1/4"

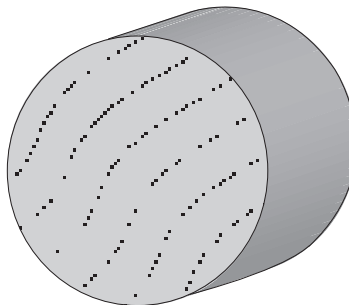

EC 232 Full Round
1-1/2" x 1-1/2"

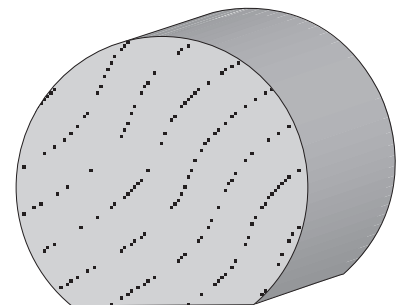

EC231 Hand Rail
1/12" x 1-11/16"



Restoration Mouldings

Special Millwork

Shutters

Mantles

Decorative Brackets

Vents

Columns

Handrail

Exterior Sidings

Cupola



www.queencitylumber.com

2501 Weddington Ave. Charlotte, NC 28204
Office 704-333-3939 Fax 704-332-3412